



NO FAULT PLAYSAFE 50 TURF SYSTEM **OUTDOOR MAINTENANCE GUIDELINES**

GENERAL MAINTENANCE

- Keep the turf clean by raking or blowing off the loose leaves, twigs and other debris
- Groom once a year and add sand as needed over seams and high wear areas
- Add mats under swings
- Post "NO SMOKING" signs around the grass. Surfaces do not burn readily but will scorch as a result of cigarettes and burning matches.
- Reapply Hydrochill sand every 5 years or so

SPECIAL MAINTENANCE

- Graffiti: use paint Lacquer thinner with numerous clean rags. Do not use the same rag over and over as it will cause smearing
- Chewing gum removal: Simply freeze with ice then scrape clean

Failure to read and follow these instructions could result in damage to the surface and termination of the
No Fault PlaySafe 50 Turf System warranty.